

# INTEX® OWNER'S MANUAL

## Quick-Fill™ Electric Air Pump

Model AP638; 6C Cell Size Batteries; 4.5 V

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

 
168 IO

### ⚠ WARNING

- Adult use only.
- Do not drop unit into water or expose unit to rain or water.
- Do not direct air stream at face or body.
- Do not obstruct vent holes or **opening**.
- Do not insert objects into the inflation or deflation connector.
- Do not operate air pump for more than 10 minutes at a time. Let pump cool at least 5 minutes between **uses**.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **Do not dispose of the batteries in regular trash, municipal waste stream or by fire as battery may leak or explode. Always dispose of the batteries safely in accordance with your local law and regulations.**
- **The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.**
- **Never recharge non-rechargeable batteries.**
- **Do not short-circuit the terminals of the battery or rechargeable battery.**

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

### NAMES OF PARTS

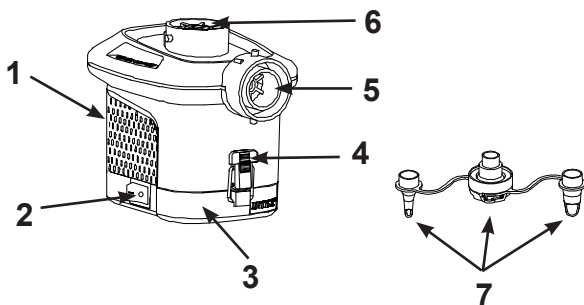

#### PARTS DESCRIPTION:

1. PUMP
2. SWITCH
3. BATTERY COMPARTMENT COVER
4. TRIGGER AND CLIP
5. INFLATION CONNECTOR
6. DEFLATION CONNECTOR
7. NOZZLES

NOTE: Drawings for illustration purpose only. Actual product may vary. Not to scale.

### INSTRUCTIONS

#### General

- This product operates on six (6) replaceable C size batteries (not included).
- For maximum power use alkaline batteries. Remove batteries from equipment which is not to be used for an extended period of time.
- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon - Zinc), or rechargeable (Nickel - Cadmium) batteries.
- Remove used batteries promptly.
- **Keep** away from heat or direct sunlight.
- No specific air pump maintenance is required.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure batteries are installed correctly with regard to polarity (+ and -).
- **If leaking battery liquid (electrolyte) comes in contact with skin, wash immediately with soap and water or neutralize it with vinegar or lemon juice. In case of contact with eyes, rinse immediately with plenty of water for 10 minutes and seek medical advice.**
- **Return** pump and nozzles to package when not in use. **Store the product indoors when not in use.**

 
# SAVE THESE INSTRUCTIONS

### INSTRUCTIONS

168 IO


#### INSTALL OR REPLACE BATTERIES

1. Open battery compartment cover. See Fig (1).
2. Insert 6-"C" alkaline batteries (**NOT INCLUDED**) as shown on the drawings inside the battery compartment. See Fig (2).
3. Replace battery compartment cover. See Fig (3).

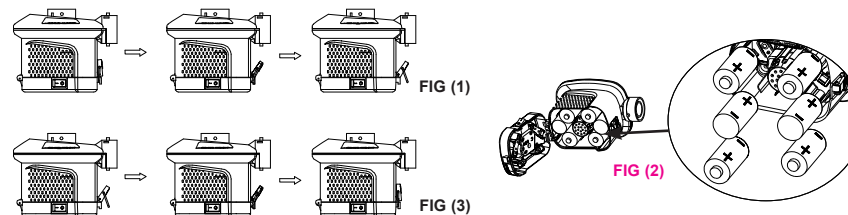


#### INFLATION

 1. Attach nozzle to the inflation connector if necessary and hold pump against inflation valve on item to be inflated. See Fig (4).  
**NOTE:** On large items like inflatable boats and large air mattresses, the pump will fit directly into the inflation valves and provide faster inflation times. Use the appropriate nozzle on small inflation valves as on small air mattresses, etc.
2. SWITCH ON: Press "I"; SWITCH OFF: Press "O". See Fig (5).

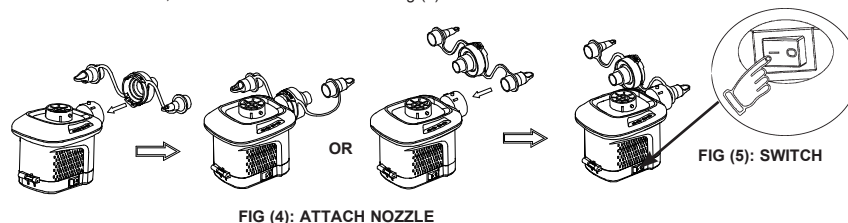

#### DEFLATION

 1. Attach nozzle to the deflation connector if necessary and hold pump against inflation valve on item to be deflated. See Fig (6).  
**NOTE:** On large items like inflatable boats and large air mattresses, the pump will fit directly into the inflation valves and provide faster deflation times. Use the appropriate nozzle on small inflation valves as on small air mattresses, etc.
2. SWITCH ON: Press "I"; SWITCH OFF: Press "O". See Fig (5).

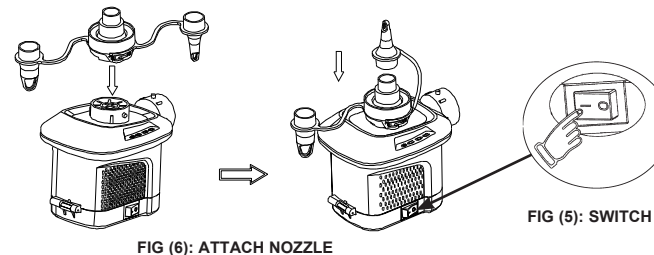

©2019 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.  
 ®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/à/à/ an Intex Development Co. Ltd., G.P.O Box 28829, Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertriebt in der Europäischen Union durch/Intex Trading B.V., Venneveld 9, 4705 RR Roosendaal - The Netherlands  
 www.intexcorp.com

# INTEX®

# SAVE THESE INSTRUCTIONS